

 
# FLIP PHONE

## Users Manual

### Front Open



### Front Closed

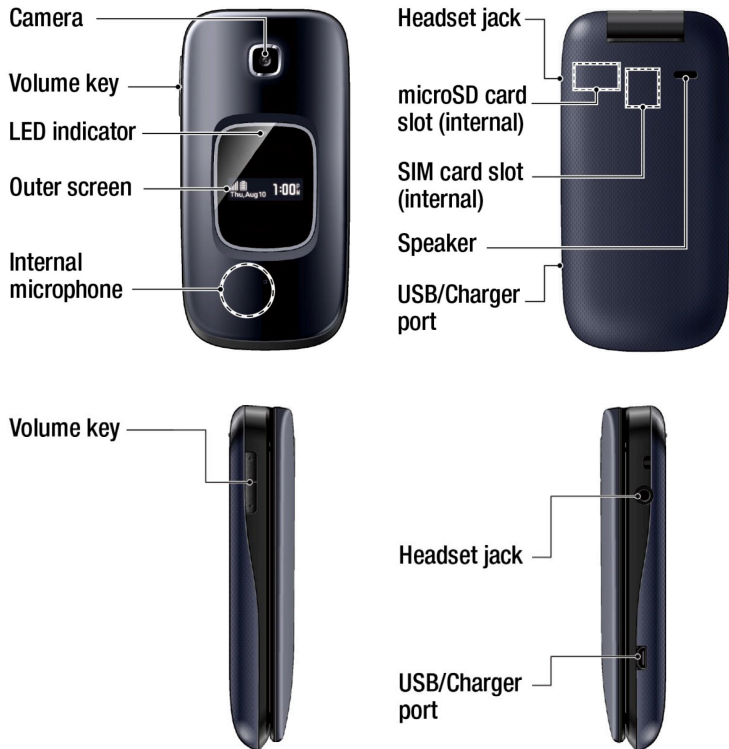

### Key Functions

#### Front

**Earpiece** Lets you hear the caller and automated prompts.

**Main Screen** Displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.

**Left/Right soft keys** (☐/☐) let you select key actions or menu items corresponding to the bottom left and right lines on the main screen while the phone is open.

**Navigation Key** Lets you scroll through the phone's menu options.

**Center Soft Key** (☐) Lets you select key actions or menu items corresponding to the bottom center lines on the main screen.

**Camera/Speaker Key** (📷) Lets you activate the camera mode and take pictures with the phone open. When you receive an incoming call, press to answer the call in speakerphone mode. During a call, press to switch the speakerphone on or off.

**SEND Key** (SEND) Allows you to place or receive calls, answer Call Waiting, use Conference Calling, or display recent call history.

**Microphone** Transmits your voice and ambient sound during voice calls and voice recordings.

**Keypad** Lets you enter numbers, letters, and characters, and perform functions.

**CLEAR/Back Key** (CLR) Deletes characters from the display in text input mode. When in a menu, pressing it returns you to the previous menu. This key also allows you to return to the previous screen in a data session.

**END/POWER Key** (END) Lets you turn the phone on or off, end a call, or cancel your input and return to the Idle screen.

**Voice Commands Key** (V) Allows you to activate Voice Commands.

**Camera** Lets you take pictures.

**Volume Key** Allows you to adjust the master volume when you are not on a call or adjust the voice volume during a call.

**LED Indicator** Displays a phone notification, charging status, or alert. It blinks when your phone's battery level is low.

**Outer Screen** Displays the information such as the call status, the date and time, and the signal and battery strength.

**Internal Microphone** Suppresses background noise improving audio quality for the other party during voice calls except in speakerphone mode.

**Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations.

**microSD Card Slot (internal)** Allows you to insert a microSD card to support external memory. The microSD compartment is behind the battery cover.

**SIM Card Slot (internal)** Allows you to insert a SIM card. The SIM compartment is behind the battery cover.

**Speaker** Lets you hear the different ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.

**USB/Charger Port** Allows you to connect the phone and the USB cable for use with the charger adapter or other compatible accessories.

### Getting Started

 
#### The Battery

##### Installing the battery


1. Place your fingernail in the slit at the bottom of the phone, and remove the battery cover.



2. Insert the battery, making sure to align the gold contacts (1). Press down gently to secure the battery (2).

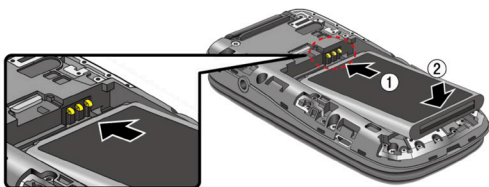

 3. Place the cover over the back of the phone, and then press down along the edges to secure.

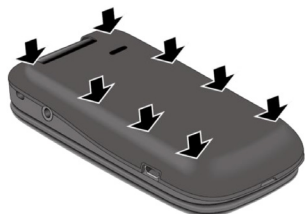

## Removing the Battery

1. Remove the battery cover.
2. Lift the battery up and out of the device, using the slot provided.
3. Replace the battery cover.

## Charging the Battery

1. Plug the smaller end of the USB cable into the USB/Charger port on the right side of the phone.



2. When charging is complete, remove the USB cable from the device.

## Turning The Phone On / Off

### Turn Phone On

- Open the phone and press and hold the **End / Power key** until the screen lights up.

### Turn Phone Off

- Open the phone and press and hold the **End / Power key** until you see the powering-down animation on the main screen.

## Making & Answering Calls

### Making Calls

1. Open the phone and enter a phone number.
2. Press the SEND key .
3. Press the END/POWER key when you are finished.

### Answering Calls

- Press the SEND key or select Answer to answer an incoming call.

### Ending Calls

- To end a call, press .

## Voicemail

### Setting Up Voicemail

1. From the Idle screen, press the Center soft key **[Menu] > Tools & Settings > Settings > Call settings > Voicemail**.
2. Configure the following settings:
  - **Voicemail number** to configure the voicemail number if necessary.
  - **Sound** to select the sound to ring for a new voicemail message.
  - **Vibrate** to select whether the phone responds with vibration to a new voicemail message.

### Checking Voicemail

1. From the Idle screen, press and hold .
 

-or-

From the Idle screen, dial and press the SEND key .
2. If prompted, enter your Voicemail password.
3. When you hear the greeting, press the Pound SPACE key to interrupt, and follow the prompts.

### Taking a Picture

1. Open the phone and press the Camera/Speaker key to activate camera mode.
 

- or -

From the Idle screen, press the Center soft key **[Menu] > Media center > Camera**.
2. Use the main screen to set up your shot.
  - Zoom in and out by pressing the Navigation key up and down.
  - Press the Right soft key **[Options]** to access the camera settings menu.
3. Press the Center soft key **[Take]** to take the picture. The picture will automatically be saved in the selected storage area.
4. Press the Left soft key **[Gallery]** to access the Gallery app.
5. To return to the Camera, press the CLEAR/Back key .

## Messaging

1. From the Idle screen, press the Right soft key **[Message]**.

-or-

From the Idle screen, press the Center soft key **[Menu] > Message**.

2. Press the Let soft key **[New Msg]**.
3. Enter a phone number in the **To** field.
4. If you add multiple recipients in the **To** field, select how you want them to reply to the message. Check **Group** to reply all or **Just Me** to reply to you only by using the Navigation key.
5. When you are finished adding recipients, press the Navigation key down to move to the **Type a message/Group Message** field.
6. Compose a message.

7. To add an attachment, press the Right soft key **[Options] > Add Attachments** and select from the following:

- **Photo:** Select **Take Photo** to take a picture to attach and **Choose From Gallery** to attach a stored picture.
- **Audio:** Select **File manager** or **Music player**, and then an audio file to attach.
- **Contact:** Opens Contacts to select one or more contact entries and attach them.

8. Review your message and press the Center soft key **[Send]**.

## Phone Features

### Turning Wi-Fi On / Off

1. From the Idle screen, press the Center soft key **[Menu] > Tools & Settings > Settings > Wireless & networks > Wi-Fi**.
2. Highlight **Wi-Fi** and press the Center soft key **[Select] > On**. The names of detected Wi-Fi networks are displayed.
3. Highlight a Wi-Fi network you want to connect to and press the Center soft key **[Connect]**. If you selected an open network, you will be automatically connected to the network. If you selected a network that is secured with a password, enter the password, and then press the Center soft key **[Save]**.

### Turning Bluetooth On / Off

1. From the Idle screen, press the Center soft key **[Menu] > Tools & Settings > Settings > Wireless & networks > Bluetooth > Bluetooth**.
2. Select **On** and press the Center soft key **[Set]** to turn Bluetooth on.
 

- or -

Select **Off** and press the Center soft key **[Set]** to turn Bluetooth off.