

QUICK START GUIDE LG VN 251 | USERS MANUAL



KEY FUNCTIONS

- 1. Earpiece** Lets you hear the caller and automated prompts.
- 2. LCD Screen** Displays digital clock, phone status, and information you choose to display.
- 3. Volume Keys** Use to adjust the Master Volume in standby mode* and the Earpiece Volume during a call. Use to adjust font sizes when viewing messages, entering phone numbers (in standby mode) or browsing menus (except for the Main menu).
- 4. Left Soft Key** Performs functions shown on the bottom-left of the display.
- 5. Accessory/Charger Port** Connects the phone to the battery charger or other compatible accessories.
- 6. Speakerphone Key** Change to speakerphone mode.
- 7. SEND Key** Use make and answer calls/send a message.
- 8. Hand Strap Hole** Allows you to insert a hand strap so that you can easily carry your phone on your hand.
- 9. 3.5 mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations.
- 10. microSD™ Slot** Accommodates optional microSD™ cards up to 32GB. The microSD Slot is located in the battery compartment.

11. Camera Lens Use to take a photo. Keep it clean for optimal photo quality.

12. OK Key/Directional Key Use to select the function displayed at the bottom of the LCD between the Left and Right Soft Key functions. Use the Directional Key to scroll through the menu items and highlight a specific field or object by moving up, down, left or right.

13. Right Soft Key Perform functions shown on the bottom-right of the display.

14. CLR Key/Voice Commands Key Deletes single spaces or characters with a quick press, but press and hold to delete the entire word. Also backs out of menus, one level at a time. You can also use this key to access Voice Commands (when you are not entering text).

15. PWR/END Key Use to turn the power on/off and to end a call. Also returns to standby mode.

16. Camera Key Use for quick access to the Camera function.

17. Alphanumeric Keypad Use to enter numbers and characters and select menu items.

18. Vibrate Mode Key Use to set Vibrate mode (from standby mode press and hold for about 3 seconds).

CONTINUED ON BACK

Installing the Battery

- Use the fingertip cutout to remove the battery cover.
- Align the battery contacts with the terminals in the battery compartment.
- Push the battery down until it clicks into place.
- Place the battery cover over the battery compartment, then press it downward until it clicks into place.

Removing the Battery

- Turn the phone off and use the fingertip cutout to remove the battery cover.
- Remove the battery from the battery compartment by lifting the bottom of the battery using the fingertip cutout.

Removing and Installing the Battery Cover.

You need to remove the back cover before you can install or remove the battery in your phone. Also, make sure to always turn your phone off before installing or replacing a battery.

Turning the Phone On and Off

- Insert the battery and connect the phone to an external power source if the battery level is low.
- Press and hold **END** until the screen lights up.
- To turn OFF - Press and hold **END** until the display turns off.

Making Calls

Make sure the phone is turned on. If not, press and hold **END** until the LCD screen lights up. If necessary, enter the lock code.

Using the external keys

- Press **OK** to unlock the screen (and keys).
- Enter the phone number.
- Press **SEND**.
- Press **END** to end the call.

Receiving Calls

- When the phone rings or vibrates, press **SEND** to answer.
- Press **END** to end the call.

Call Waiting

During a call, one beep indicates another incoming call. Press **SEND** to answer it and put the first call on hold. Press **SEND** again to return to the first call.

Backlight

Allows you to set the duration for illuminating the backlight for the display and keypad. Each is set separately.

- From standby mode, press **OK** [Menu].
- Press **9** [Settings & Tools].
- Press **7** [Display Settings].
- Press **3** [Backlight].
- Highlight a Backlight submenu and press **OK**.

Display Backlight: 7 Seconds/15 Seconds/30 Seconds/Always Off

Keypad Backlight: 7 Seconds/15 Seconds/30 Seconds/Always Off

Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

Allows you to send messages (Text, Picture, and Voice). Each message can have multiple destination addresses and can contain various items of information. These are dependent upon the type of message you want to send.

Sending a Text Message

- From standby mode, slide open the QWERTY keyboard and select Messaging.
- Press **1** [New Message].
- Press **1** [TXT Message].
- Enter the phone number of the recipient or the email address for an email message. You can enter up to 20 addresses for a single message.
- Press the **Directional Key down**.
- Type your message in the text field.
- Press **OK** to Send.

Pictures

View, take, and trade digital pictures right from your wireless phone.

Access

- From standby mode, press **OK** [Menu].
- Press **5** [Media Center].
- Press **5** [Pictures].
- Press **1** [My Pictures].

Take a Picture

- From standby mode, press **OK** [Menu].
- Press **5** Media Center.
- Press **5** Pictures.
- Press **2** Take Picture.
- Set the zoom by pressing the **Directional Key up/down** , brightness by pressing the **Directional Key left/right** , and press the **Right Soft Key** [Options] to change other settings.
- Take a picture by pressing **OK** [Take].
- Press the **Left Soft Key** [Save]. The picture is stored in My Pictures.

Taking pictures with the slide closed

- Unlock the front LCD.
- Press the Camera Key on the right side of the phone.

Bluetooth

Turn On - Allows you to set the phone's Bluetooth® power to On/Off.

- From standby mode, press **OK** [Menu].
- Press **9** [Settings & Tools].
- Press **4** [Bluetooth Menu].
- Press the **Left Soft Key** [Turn On].

Internet

The Mobile Web feature allows you to access news, sports, weather and email from your Verizon Wireless device. Access and selections within this feature are dependent upon your service provider. For specific information on Mobile Web through your phone, contact your service provider.

SHORTCUT Pressing the **Directional Key left** while in standby mode is a shortcut to Mobile Web.

- From standby mode, press **OK** [Menu].
- Press **5** [Media Center].
- Press **3** [Mobile Web].

Email

Allows you to send an email via Mobile Web. You can also send and receive emails through the Mobile Email application after downloading the application.

Mobile Email

- From standby mode, press **OK** [Menu].
- Press **6** [Mobile Email].
- Follow the prompts to set up your account(s).

NOTE Depending on your provider, a monthly service may be required.